

S Sandberg®
ACTIVE 

Survivor Camper Powerbank 42000


Quick guide

420-45



www.sandberg.world

Overview

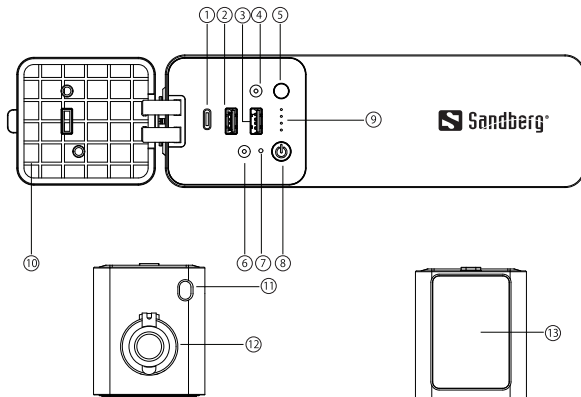

① Type-C

② USB 5V/2.1A

③ USB 5V/2.1A

④ DC Output

⑤ LED Light Switch

⑥ Input 19V/2A

⑦ Power indicator

⑧ Main Power Button

⑨ LED Indicator


⑩ Waterproof cover

⑪ Hook hole


⑫ Car Socket

⑬ LED Light


Charge Powerbank

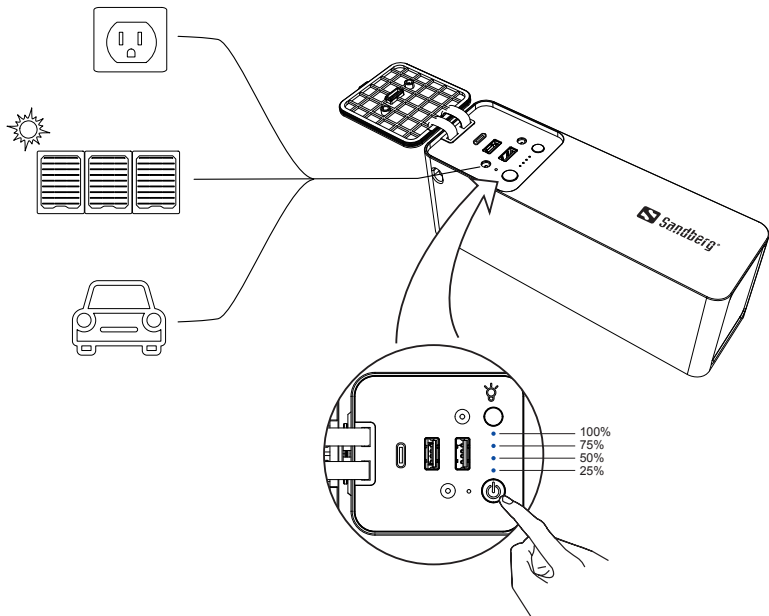


Charge device (USB Output)

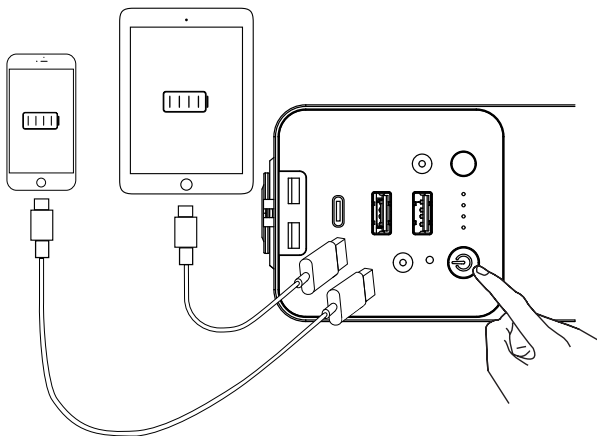


Charge device (Car Socket)

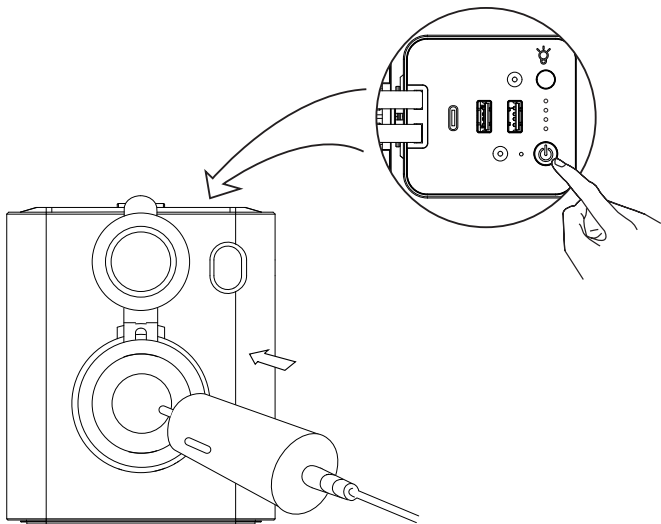


Charge device (DC Output)

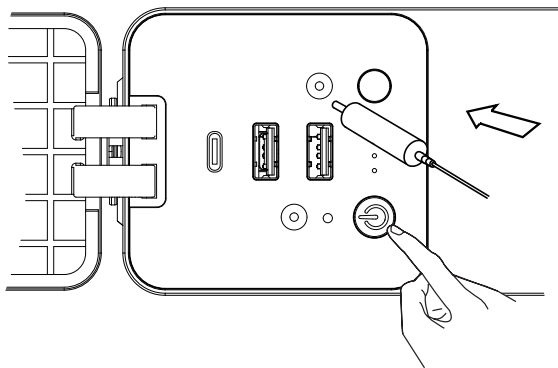


LED light procedure

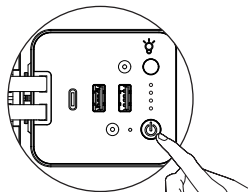


1. Turn on main power

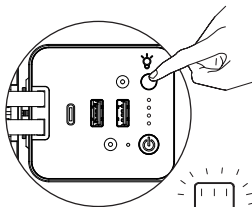


2. Long press for white light

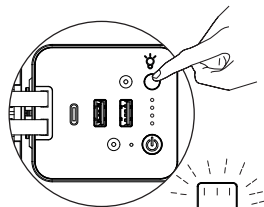


3. Short press for white light SOS

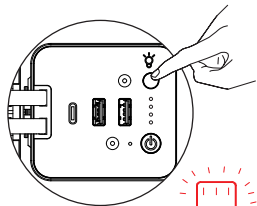

4. Short press for red light

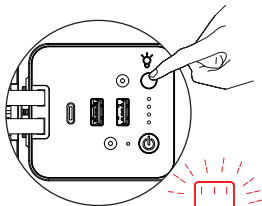

5. Short press for red light SOS

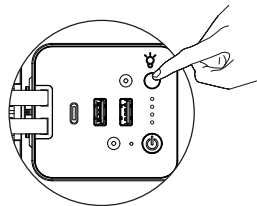

3. Long press to turn off



Support

<http://helpdesk.sandberg.world>

Warranty

*There is a five-year warranty on your Sandberg product.
Please read the warranty terms and register your new
Sandberg product at www.sandberg.world/warranty*

5
Years
Warranty

For information on handling electronic waste, see www.sandberg.world/weee



—